

## **PAPERUPDATE system variable**

1734 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 842

### **Function Description:**

The **PAPERUPDATE** system variable is used to control the display of warning dialog box when trying to plot layout by a different paper size from default configuration files of plotter.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : display warning dialog box if the plotter does not support specified paper size in layout

**1** : set the drawing to be the size configured for plotter

Online URL: <https://www.gstarcad.com.my/knowledge/article/paperupdate-system-variable-1734.html>