

## **PDFFRAME system variable**

1735 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 751

### **Function Description:**

The **PDFFRAME** system variable is used to determine whether the PDF lay frame is visible.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1,2

### **System Variable Value:**

**0** : do not display and plot PDF underlay frame

Temporarily display the frame when previewing selection or selecting objects

**1** : display and plot PDF underlay frames

**2** : display but do not plot PDF underlay frame

Online URL: <https://www.gstarcad.com.my/knowledge/article/pdfframe-system-variable-1735.html>