

PDFOSNAP system variable

1736 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 1000

Function Description:

The **PDFOSNAP** system variable is used to determine whether to active object snap for geometric drawing in PDF underlay attached in drawing

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : object snapping is disabled for geometry in all PDF underlay attachments in the drawing

1 : object snapping is disabled for geometry in all PDF underlay attachments in the drawing

Online URL: <https://www.gstarcad.com.my/knowledge/article/pdfosnap-system-variable-1736.html>