

## **PDFOSNAP system variable**

1736 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 1009

### **Function Description:**

The **PDFOSNAP** system variable is used to determine whether to active object snap for geometric drawing in PDF underlay attached in drawing

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : object snapping is disabled for geometry in all PDF underlay attachments in the drawing

**1** : object snapping is disabled for geometry in all PDF underlay attachments in the drawing

Online URL: <https://www.gstarcad.com.my/knowledge/article/pdfosnap-system-variable-1736.html>