

## **PDSIZE system variable**

1738 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 773

### **Function Description:**

The **PDSIZE** system variable is used to set the display size of point objects.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

### **System Variable Value:**

**0** : create points at 5 percent of the drawing area height

**>0** : specify the absolutely size

**<0** : specify a percentage of viewport size

Online URL: <https://www.gstarcad.com.my/knowledge/article/pdsize-system-variable-1738.html>