

## **PELLIPSE system variable**

1740 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 917

### **Function Description:**

The **PELLIPSE** system variable is used to control the ellipse types created by ELLIPSE command.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : create ellipse objects

**1** : create ellipse objects expressed by polylines

Online URL: <https://www.gstarcad.com.my/knowledge/article/pellipse-system-variable-1740.html>