

PELLIPSE system variable

1740 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 910

Function Description:

The **PELLIPSE** system variable is used to control the ellipse types created by ELLIPSE command.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : create ellipse objects

1 : create ellipse objects expressed by polylines

Online URL: <https://www.gstarcad.com.my/knowledge/article/pellipse-system-variable-1740.html>