

PERIMETER system variable

1741 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 927

Function Description:

The **PERIMETER** system variable is used to store the last perimeter calculated by **AREA** and **LIST** commands.

(Read-Only)

Type : Real

Saved in Not : saved

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/perimeter-system-variable-1741.html>