

## **PERIMETER system variable**

1741 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 935

### **Function Description:**

The **PERIMETER** system variable is used to store the last perimeter calculated by **AREA** and **LIST** commands.

(Read-Only)

**Type** : Real

**Saved in Not** : saved

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/perimeter-system-variable-1741.html>