

## **PFACEVMAX system variable**

1742 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 732

### **Function Description:**

The **PFACEVMAX** system variable is used to set the maximum number of vertex in polyfaces.  
(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 4

This system variable only has effect on traditional polyfaces that created by **PFACE**.

Online URL: <https://www.gstarcad.com.my/knowledge/article/pfacevmax-system-variable-1742.html>