PICKDRAG system variable

1746 GstarCAD MY /KW July 23, 2021 System Variables 0 732

Function Description:

The **PICKDRAG** system variable is used to control the method of drawing a selection window.

Type: Integer Saved in: Registry Initial value: 2 Range: 0,1,2

System Variable Value:

0: selecting window by specifying two points. Clicking once to begin window selecting, clicking the second time to complete selecting.

1 : click and drag to specify window selection. Release the mouse to complete selecting.

2: either methods of above to specify window selection.

Online URL: https://www.gstarcad.com.my/knowledge/article/pickdrag-system-variable-1746.html