

PICKFIRST system variable

1747 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 844

Function Description:

The **PICKFIRST** system variable is used to control whether need to select objects before starting the command.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : off. Only select objects after starting the command.

1 : on. Users could also select objects before starting the command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/pickfirst-system-variable-1747.html>