

## **PICKFIRST system variable**

1747 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 800

### **Function Description:**

The **PICKFIRST** system variable is used to control whether need to select objects before starting the command.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : off. Only select objects after starting the command.

**1** : on. Users could also select objects before starting the command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/pickfirst-system-variable-1747.html>