

PICKSTYLE system variable

1748 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 1195

Function Description:

The **PICKSTYLE** system variable is used to control the use of group selection and associative hatch selection.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1,2,3

System Variable Value:

0 : do not use the group selection and associative hatch selection.

1 : use the group selection

2 : use the associative hatch selection.

4 : use the group selection and associative hatch selection.

Online URL: <https://www.gstarcad.com.my/knowledge/article/pickstyle-system-variable-1748.html>