

## **PLINETYPE system variable**

1752 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 985

### **Function Description:**

The **PLINETYPE** system variable is used to control whether to use optimized 2D polylines.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 2

**Range** : 0,1,2

### **System Variable Value:**

**0** : do not convert polylines when opening an old drawing; PLINE creates polylines in old format.

**1** : do not convert polylines when opening an old drawing; PLINE creates optimized polylines.

**2** : do not convert polylines when opening an old drawing; PLINE creates optimized polylines.

The **PLINETYPE** system variable also controls the polyline types created by the following commands: BOUNDARY, DONUT, PEDIT, POLYGON, and SKETCH.

Online URL: <https://www.gstarcad.com.my/knowledge/article/plinetype-system-variable-1752.html>