

PLINETYPE system variable

1752 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 1016

Function Description:

The **PLINETYPE** system variable is used to control whether to use optimized 2D polylines.

Type : Integer

Saved in : Registry

Initial value : 2

Range : 0,1,2

System Variable Value:

0 : do not convert polylines when opening an old drawing; PLINE creates polylines in old format.

1 : do not convert polylines when opening an old drawing; PLINE creates optimized polylines.

2 : do not convert polylines when opening an old drawing; PLINE creates optimized polylines.

The **PLINETYPE** system variable also controls the polyline types created by the following commands: BOUNDARY, DONUT, PEDIT, POLYGON, and SKETCH.

Online URL: <https://www.gstarcad.com.my/knowledge/article/plinetype-system-variable-1752.html>