

PLINEWID system variable

1753 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 784

Function Description:

The **PLINEWID** system variable is used to store the default polyline width.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/plinewid-system-variable-1753.html>