

## **PLINEWID system variable**

1753 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 800

### **Function Description:**

The **PLINEWID** system variable is used to store the default polyline width.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/plinewid-system-variable-1753.html>