

PLOTOFFSET system variable

1754 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 938

Function Description:

The **PLOTOFFSET** system variable is used to control whether the plot offset is relative to printable area or edges of papers.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : the plot offset is relative to printable area

1 : the plot offset is relative to edges of papers

Online URL: <https://www.gstarcad.com.my/knowledge/article/plotoffset-system-variable-1754.html>