

PLQUIET system variable

1756 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 1046

Function Description:

The **PLQUIET** system variable is used to control the display for optional plot-related dialog boxes and nonfatal errors for scripts..

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : display plot-related dialog and nonfatal errors

1 : record nonfatal errors, but do not display plot-related dialog

Online URL: <https://www.gstarcad.com.my/knowledge/article/plquiet-system-variable-1756.html>