

# **POLARADDANG system variable**

1757 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 853

## **Function Description:**

The **POLARADDANG** system variable is used to store the additional angle for polar tracking and polar snap.

**Type** : Strings

**Saved in** : Registry

**Initial value** : ""

Users could add up to 10 angles. They could separated by commas. The **AUNITS** system variable could set angle displaying formats.

The **POLARMODE** system variable must be set to be 5, or the **POLARADDANG** does not have effect.

When using fractions of an angle, set the **AUPREC** system variable (angular precision) to a higher value. Otherwise, the **POLARADDANG** value will be rounded off. .

Online URL: <https://www.gstarcad.com.my/knowledge/article/polaraddang-system-variable-1757.html>