

POLARANG system variable

1758 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 736

Function Description:

The **POLARANG** system variable is used to set the polar angle increment.

Type : Real

Saved in : Registry

Initial value : 90

Range : 90,45,30,22.5,18,15,10,5

Online URL: <https://www.gstarcad.com.my/knowledge/article/polarang-system-variable-1758.html>