

## **POLARANG system variable**

1758 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 717

### **Function Description:**

The **POLARANG** system variable is used to set the polar angle increment.

**Type** : Real

**Saved in** : Registry

**Initial value** : 90

**Range** : 90,45,30,22.5,18,15,10,5

Online URL: <https://www.gstarcad.com.my/knowledge/article/polarang-system-variable-1758.html>