

## **POLARDIST system variable**

1759 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 680

### **Function Description:**

The **POLARDIST** system variable is used to set snap increment when **SNAPTYPE** set to be 1.

**Type** : Real

**Saved in** : Registry

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/polardist-system-variable-1759.html>