

## **POLYSIDES system variable**

1761 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 879

### **Function Description:**

The **POLYSIDES** system variable is used to set default edge number for POLYGON command.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 4

**Range** : 3 ~ 1024

Online URL: <https://www.gstarcad.com.my/knowledge/article/polysides-system-variable-1761.html>