

## **POPUPS system variable**

1762 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 784

### **Function Description:**

The **POPUPS** system variable is used to display the status of current configured display driver.  
(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** do not support dialog box, menu bar, and icon menu

**1** : support those features

Online URL: <https://www.gstarcad.com.my/knowledge/article/popups-system-variable-1762.html>