

## **PREVIEWTYPE system variable**

1766 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 940

### **Function Description:**

The **PREVIEWTYPE** system variable is used to control which viewport will use the drawing thumbnail preview.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

### **System Variable Value:**

**0** : use last saved view

**1** : use the main view

Online URL: <https://www.gstarcad.com.my/knowledge/article/previewtype-system-variable-1766.html>