

PREVIEWTYPE system variable

1766 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 944

Function Description:

The **PREVIEWTYPE** system variable is used to control which viewport will use the drawing thumbnail preview.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : use last saved view

1 : use the main view

Online URL: <https://www.gstarcad.com.my/knowledge/article/previewtype-system-variable-1766.html>