

## **PROJMODE system variable**

1770 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 631

### **Function Description:**

The **PROJMODE** system variable is used to set the current Projection mode for trimming or extending.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1,2

### **System Variable Value:**

**0** : no projection

**1** : project to the XY plane of current UCS

**2** : project to current view plane

Online URL: <https://www.gstarcad.com.my/knowledge/article/projmode-system-variable-1770.html>