

PROXYSHOW system variable

1773 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 841

Function Description:

The **PROXYSHOW** system variable is used to control the display of proxy objects in a drawing.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1,2

System Variable Value:

0 : do not display proxy objects

1 : display all proxy objects graphics

2 : only display frames of proxy objects

Online URL: <https://www.gstarcad.com.my/knowledge/article/proxyshow-system-variable-1773.html>