

PSOLWIDTH system variable

1777 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 828

Function Description:

The **PSOLWIDTH** system variable is used to control the default width of swept solid objects.

Type : Real

Saved in : Drawing

Initial value : 0.2500(Imperial) or 5.0000(Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/psolwidth-system-variable-1777.html>