

## **PSOLWIDTH system variable**

1777 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 854

### **Function Description:**

The **PSOLWIDTH** system variable is used to control the default width of swept solid objects.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.2500(Imperial) or 5.0000(Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/psolwidth-system-variable-1777.html>