

## **PSVPSCALE system variable**

1780 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 707

### **Function Description:**

The **PSVPSCALE** system variable is used to set scale factors for all new created viewports.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

The viewport scale factor is defined by comparing the drawing units in paper space and new created model space. The viewport scale factor that users set is in use together with **VPORTS** command. Specifying it to be 0 means scale to fit. A scale must be a positive real value.

Online URL: <https://www.gstarcad.com.my/knowledge/article/psvpscale-system-variable-1780.html>