

PUCSBASE system variable

1784 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 692

Function Description:

The **PUCSBASE** system variable is used to store the UCS name defines origin and orientation for ortho UCS settings (only in paper space).

Type : Strings

Saved in : Drawing

Initial value : ""

Online URL: <https://www.gstarcad.com.my/knowledge/article/pucsbase-system-variable-1784.html>