

## QCSTATE system variable

1785 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 770

### Function Description:

The **QCSTATE** system variable is used to specify whether the quick calculation is on or off.  
(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : Unknown

**Range** : 0,1

### System Variable Value:

**0** : off

**1** : on

Online URL: <https://www.gstarcad.com.my/knowledge/article/qcstate-system-variable-1785.html>