

QVDRAWINGPIN system variable

1787 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 846

Function Description:

The **QVDRAWINGPIN** system variable is used to control the default display state of preview images of drawing.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1

System Variable Value:

0 : display preview images of drawing in an unpinned state

1 : display preview images of drawing in a pinned state

Online URL: <https://www.gstarcad.com.my/knowledge/article/qvdrawingpin-system-variable-1787.html>