

QVLAYOUTPIN system variable

1788 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 957

Function Description:

The **QVLAYOUTPIN** system variable is used to control the default display state of preview images in model space and layout in a drawing.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 : display preview images in an unpinned state in model space and layouts in a drawing

1 : display preview images in a pinned state in model space and layouts in a drawing

Online URL: <https://www.gstarcad.com.my/knowledge/article/qvlayoutpin-system-variable-1788.html>