

REGENMODE system variable

1791 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 846

Function Description:

The **REGENMODE** system variable is used to control how drawing regenerating automatically.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : disable commands automatically regeneration

1 : enable some commands automatically regeneration

Online URL: <https://www.gstarcad.com.my/knowledge/article/regenmode-system-variable-1791.html>