

## **SAVEFIDELITY system variable**

1797 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1108

### **Function Description:**

The **SAVEFIDELITY** system variable is used to control the visual fidelity for annotative objects viewing in earlier versions.

**Type** : Bitcode

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : do not save visual fidelity when saving it

**1** : the annotative scales specified to annotation objects will be saved to their independent layers for each scale.

Online URL: <https://www.gstarcad.com.my/knowledge/article/savefidelity-system-variable-1797.html>