

SAVEFIDELITY system variable

1797 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1117

Function Description:

The **SAVEFIDELITY** system variable is used to control the visual fidelity for annotative objects viewing in earlier versions.

Type : Bitcode

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not save visual fidelity when saving it

1 : the annotative scales specified to annotation objects will be saved to their independent layers for each scale.

Online URL: <https://www.gstarcad.com.my/knowledge/article/savefidelity-system-variable-1797.html>