

SAVEFILE system variable

1798 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 827

Function Description:

The **SAVEFILE** system variable is used to store the current automatically saved file name.
(Read-Only)

Type : Integer

Saved in : Registry

Initial value : Unknown

Online URL: <https://www.gstarcad.com.my/knowledge/article/savefile-system-variable-1798.html>