

## **SELECTIONANNODISPLAY system variable**

1803 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1157

### **Function Description:**

The **SELECTIONANNODISPLAY** system variable is used to control whether alternate scale representations are temporarily displayed in a dimmed state when annotative objects selected.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### **System Variable Value:**

**0** : off

**1** : on

The dimmed degree is determined by **XFADECTL** system variable.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/selectionannodisplay-system-variable-1803.html>