

SELECTIONANNODISPLAY system variable

1803 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1151

Function Description:

The **SELECTIONANNODISPLAY** system variable is used to control whether alternate scale representations are temporarily displayed in a dimmed state when annotative objects selected.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : off

1 : on

The dimmed degree is determined by **XFADECTL** system variable.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/selectionannodisplay-system-variable-1803.html>