

# SELECTIONCYCLING system variable

1806 GstarCAD MY /KW April 15, 2022 [System Variables](#) 0 1608

Function Description:

The **SELECTIONCYCLING** system variable is used to control the display option associated with overlapped objects and cycling selection.

**Type** : Integer

**Saved in** : Registry

**Initial value** : -2

**Range** : 0,1,2

The **SELECTIONCYCLING** system variable is used to control the display option associated with overlapped objects and cycling selection.

## System Variable Value:

**0** : disabled display options

**1** : only display profiles

**2** : display marks and selection dialog box

Pressing Ctrl+W key to switch current setting on and off.

When the setting of **SELECTIONCYCLING** is a negative value, close cycling selection, but the setting will be stored.

---

## Related tutorial video:

- [Wipeout command](#) 00:37
- [Selectioncycling command](#) 00:54
- [Menus and Shortcut Menus](#) 01:10
- [Block command](#) 01:12
- [Revcloud command](#) 02:05

Above video sources from [TUTORIAL - GETTING STARTED WITH GSTARCAD](#), enrol now for free.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/selectioncycling-system-variable-1806.html>