

SETBYLAYERMODE system variable

1809 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 760

Function Description:

The **SETBYLAYERMODE** system variable is used to control which property are selected for **SETBLAYER** command.

Type : Integer

Saved in : Registry

Initial value : 255

Range : 0,1,2,4,8,16,32,64,128

The setting is stored as a bitcode using the sum of listed system variable values.

System Variable Value:

0 : none

1 : color property

2 : linetype property

4 : lineweight property

8 : material property

16 : plot style property

32 :plot style property

64 :change "ByBlock" to be "Bylayer" including blocks

128 :change "ByBlock" to be "Bylayer" including blocks

Online URL:

<https://www.gstarcad.com.my/knowledge/article/setbylayermode-system-variable-1809.html>