

## **SHADEDGE system variable**

1810 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 777

### **Function Description:**

The **SHADEDGE** system variable is used to control the shading of edges.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 3

**Range** : 0,1 ,2,3

### **System Variable Value:**

**0** : shade faces but do not highlight edges

**1** : shade faces and draw edges by background color

**2** : do not hatch faces but draw edges by object color

**3** : shade faces by object color and draw edges by background color

Online URL: <https://www.gstarcad.com.my/knowledge/article/shadedge-system-variable-1810.html>