

SHADEDGE system variable

1810 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 751

Function Description:

The **SHADEDGE** system variable is used to control the shading of edges.

Type : Integer

Saved in : Drawing

Initial value : 3

Range : 0,1 ,2,3

System Variable Value:

0 : shade faces but do not highlight edges

1 : shade faces and draw edges by background color

2 : do not hatch faces but draw edges by object color

3 : shade faces by object color and draw edges by background color

Online URL: <https://www.gstarcad.com.my/knowledge/article/shadedge-system-variable-1810.html>