

SHADOWPLANELOCATION system variable

1812 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 1146

Function Description:

The **SHADOWPLANELOCATION** system variable is used to control the location of an invisible ground plane used to display shadows.

Type : Real

Saved in : Drawing

Initial value : 0.0000

The **SHADOWPLANELOCATION** value is current location on Z axis. The ground plane is invisible, but it could project and receive shadows. Objects under ground plane could project shadows by ground plane.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/shadowplane-location-system-variable-1812.html>