

SHOWHIST system variable

1814 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 627

Function Description:

The **SHOWHIST** system variable is used to control the Show History property for solids in a drawing.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1,2

System Variable Value:

0 : set the "Show History" property of all solids to be no(Read only). Replace settings of "Show History" property of all solids. Users could not view original objects for creating solids.

1 : do not replace settings of "Show History" property of all solids.

2 : display all solids history by replacing settings of "Show History" property of all solids. Users could view original objects for creating solids.

Online URL: <https://www.gstarcad.com.my/knowledge/article/showhist-system-variable-1814.html>