

## **SHOWHIST system variable**

1814 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 641

### **Function Description:**

The **SHOWHIST** system variable is used to control the Show History property for solids in a drawing.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1,2

### **System Variable Value:**

**0** : set the "Show History" property of all solids to be no(Read only). Replace settings of "Show History" property of all solids. Users could not view original objects for creating solids.

**1** : do not replace settings of "Show History" property of all solids.

**2** : display all solids history by replacing settings of "Show History" property of all solids. Users could view original objects for creating solids.

Online URL: <https://www.gstarcad.com.my/knowledge/article/showhist-system-variable-1814.html>